

6RD GRENADE POUCH: RETENTION STRAPS



RETENTION STRAP 01:

- + Insert the retention strap.



RETENTION STRAP 02:

- + Connect hook and loop panels at desired height location.
- + Retention strap will make fit of round a little tighter.



RETENTION STRAP 03:

- + Retention straps can be removed/added to any location.

6RD GRENADE POUCH: MAIN COMPARTMENT



INSERT 01:

- + The main compartment includes a loop field on front and rear panels for insert attachment.
- + Internal inserts can be removed to provide a general purpose pouch.



INSERT 02:

- + Place inserts inside pouch.
- + Grenades bottom out with webbing cradle but height location in the pouch can be adjusted to desired location.



INSERT 03:

- + Pouch can house up to 6 grenades.



FRONT FLAP 01:

- + Front flap can be folded under and attached to the loop on front panel of pouch to keep the flap out of the way.

WARNING:

It is the user's responsibility to ensure the correct rounds are stored in the pouch as well as identified prior to removal and use.

6RD GRENADE POUCH: CONFIGURATIONS



THIGH RIG CONFIGURATION 01:

- + Insert thigh rig strap with rubber inlay in webbing loops on back of pouch.
- + Attach belt keeper with gate keeper and adjustable strap with tension lock to pouch.



THIGH RIG CONFIGURATION 02:

- + Front view of thigh rig configuration.



BELT ATTACHMENT CONFIGURATION 01:

- + Tuck in MINIMOLL straps and remove thigh rig strap and adjustable top strap.
- + Attach belt keeper (snaps on front) using gate keeper.



MINIMOLL ATTACHMENT CONFIGURATION 01:

- + Weave MINIMOLL straps to any MOLLE panel for attachment.



INSERT CONNECTION 01:

- + Inserts can be attached to each with included gate keeper